



I-PHONE Polska
telefonია przyszłości

Podręczna instrukcja obsługi bramki VoIP Linksys PAP2T (dwie niezależne linie DarmowyTelefon)





1. Pierwsze uruchomienie.

Podłączenie bramki VoIP do internetu.


Bramkę VoIP podłączamy kablem sieciowym RJ45 (dołączony w zestawie) do routera. Następnie do bramy VoIP podłączamy zasilanie. Otwieramy przeglądarkę internetową (np. Internet Explorer) i w pasku adresu wpisujemy adres bramki w sieci lokalnej (możemy go sprawdzić np. w panelu konfiguracyjnym naszego routera). Zatwierdzamy naciskając ENTER.

Sposób podłączenia:



Logowanie do panelu konfiguracyjnego bramki VoIP

Krok 1

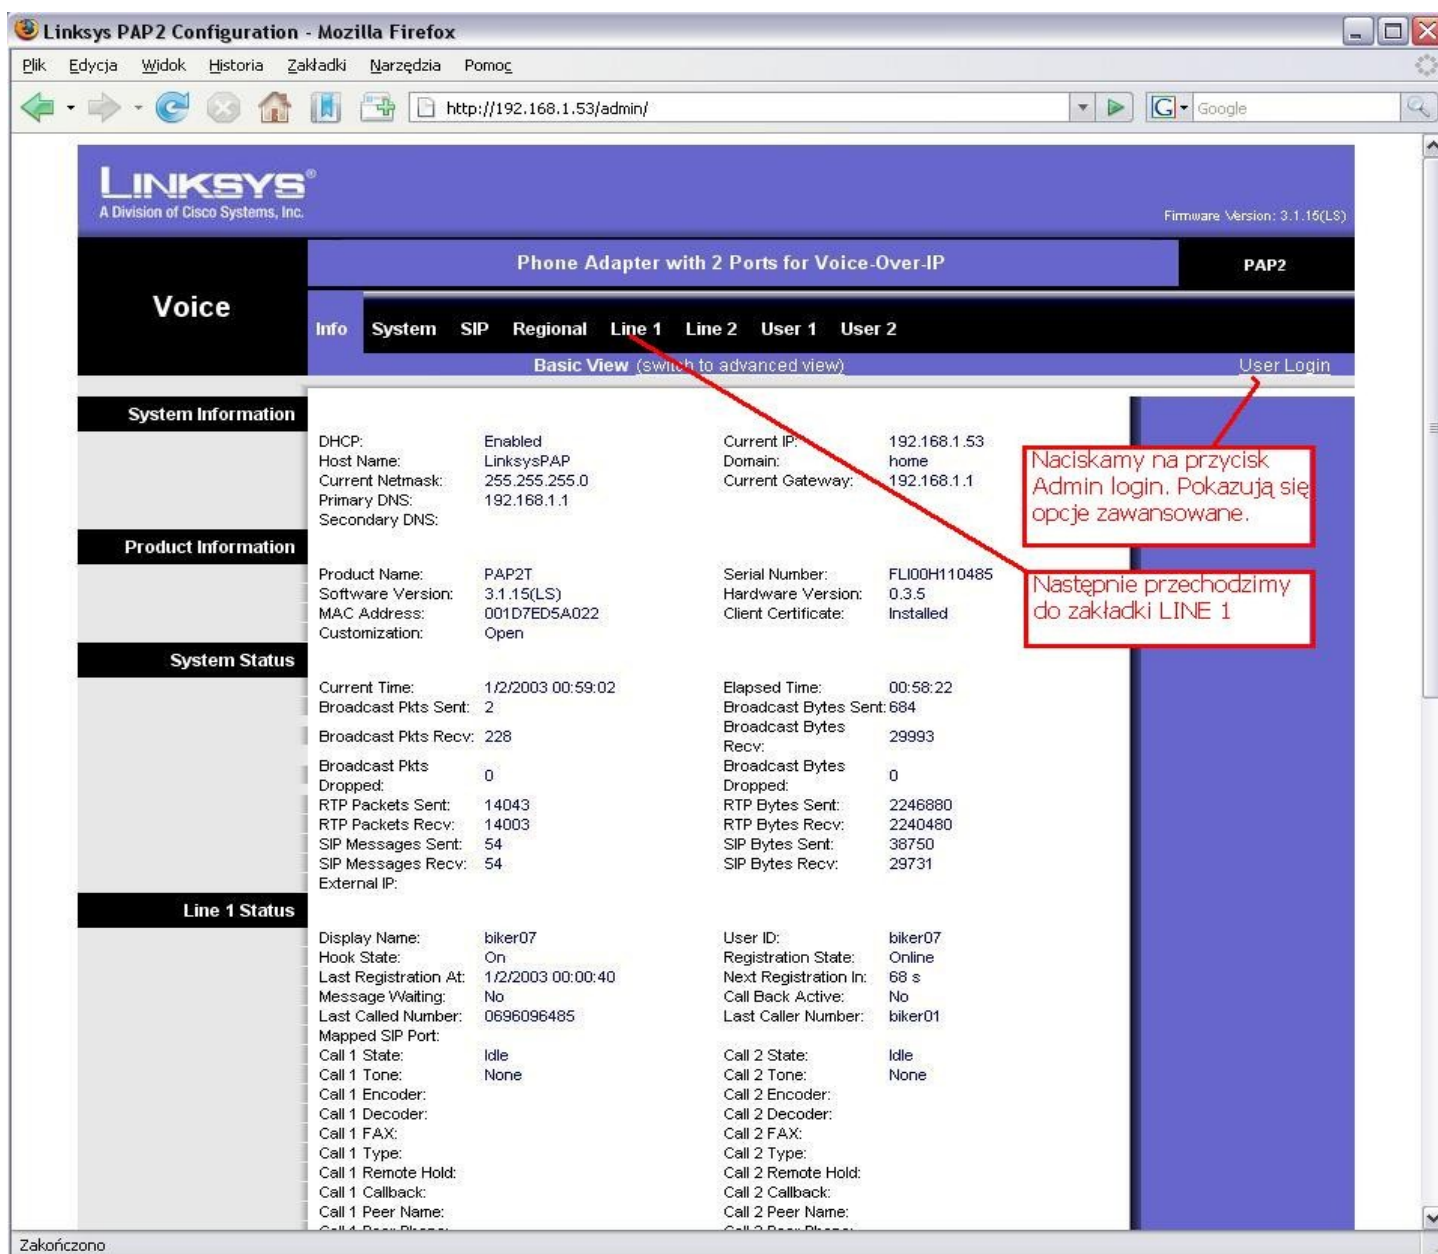

LINKSYS
A Division of Cisco Systems, Inc.

Firmware Version: 3.1.15(LS)

Phone Adapter with 2 Ports for Voice-Over-IP **PAP2**

Voice

Info **System** SIP Regional Line 1 Line 2 User 1 User 2

Basic View (switch to advanced view) [User Login](#)

System Information

| | | | |
|------------------|---------------|------------------|--------------|
| DHCP: | Enabled | Current IP: | 192.168.1.53 |
| Host Name: | LinksysPAP | Domain: | home |
| Current Netmask: | 255.255.255.0 | Current Gateway: | 192.168.1.1 |
| Primary DNS: | 192.168.1.1 | | |
| Secondary DNS: | | | |

Product Information

| | | | |
|-------------------|--------------|---------------------|--------------|
| Product Name: | PAP2T | Serial Number: | FLI00H110485 |
| Software Version: | 3.1.15(LS) | Hardware Version: | 0.3.5 |
| MAC Address: | 001D7ED5A022 | Client Certificate: | Installed |
| Customization: | Open | | |

System Status


| | | | |
|-------------------------|-------------------|--------------------------|----------|
| Current Time: | 1/2/2003 00:59:02 | Elapsed Time: | 00:58:22 |
| Broadcast Pkts Sent: | 2 | Broadcast Bytes Sent: | 684 |
| Broadcast Pkts Recv: | 228 | Broadcast Bytes Recv: | 29993 |
| Broadcast Pkts Dropped: | 0 | Broadcast Bytes Dropped: | 0 |
| RTP Packets Sent: | 14043 | RTP Bytes Sent: | 2246880 |
| RTP Packets Recv: | 14003 | RTP Bytes Recv: | 2240480 |
| SIP Messages Sent: | 54 | SIP Bytes Sent: | 38750 |
| SIP Messages Recv: | 54 | SIP Bytes Recv: | 29731 |
| External IP: | | | |

Line 1 Status

| | | | |
|-----------------------|-------------------|-----------------------|---------|
| Display Name: | biker07 | User ID: | biker07 |
| Hook State: | On | Registration State: | Online |
| Last Registration At: | 1/2/2003 00:00:40 | Next Registration In: | 68 s |
| Message Waiting: | No | Call Back Active: | No |
| Last Called Number: | 0696096485 | Last Caller Number: | biker01 |
| Mapped SIP Port: | | | |
| Call 1 State: | Idle | Call 2 State: | Idle |
| Call 1 Tone: | None | Call 2 Tone: | None |
| Call 1 Encoder: | | Call 2 Encoder: | |
| Call 1 Decoder: | | Call 2 Decoder: | |
| Call 1 FAX: | | Call 2 FAX: | |
| Call 1 Type: | | Call 2 Type: | |
| Call 1 Remote Hold: | | Call 2 Remote Hold: | |
| Call 1 Callback: | | Call 2 Callback: | |
| Call 1 Peer Name: | | Call 2 Peer Name: | |
| Call 1 Peer Phone: | | Call 2 Peer Phone: | |

Zakończono

Krok 2

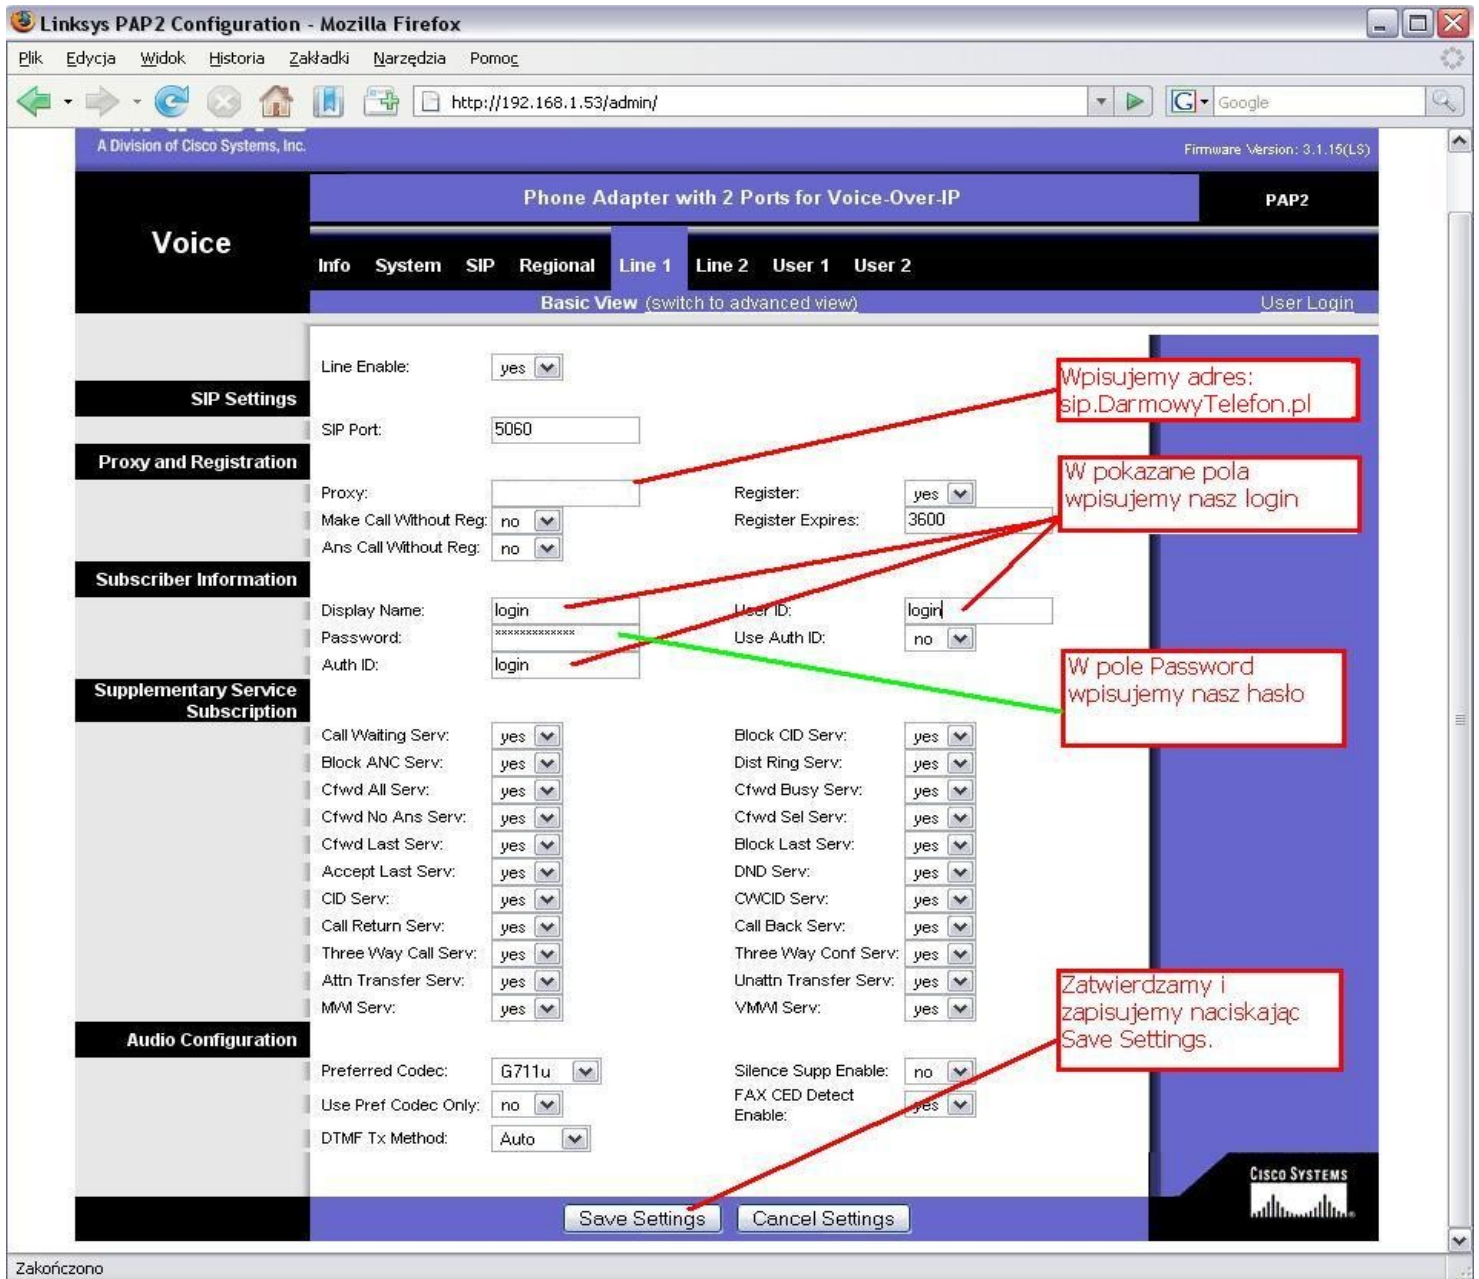

The screenshot shows the Linksys PAP2 Configuration web interface in Mozilla Firefox. The browser address bar shows `http://192.168.1.53/admin/`. The interface is titled "Linksys PAP2 Configuration - Mozilla Firefox" and "A Division of Cisco Systems, Inc." with "Firmware Version: 3.1.15(L5)".

The main navigation bar includes "Voice", "Info", "System", "SIP", "Regional", "Line 1", "Line 2", "User 1", and "User 2". The "Line 1" tab is selected, and the "Basic View" is active.

Red callout boxes provide instructions for configuration:

- Wpisujemy adres: sip.DarmowyTelefon.pl**: Points to the SIP Port field, which contains "5060".
- W pokazane pola wpisujemy nasz login**: Points to the "Register" dropdown (set to "yes") and the "Register Expires" field (set to "3600").
- W pole Password wpisujemy nasz hasło**: Points to the "Password" field, which contains "*****".
- Zatwierdzamy i zapisujemy naciskając Save Settings.**: Points to the "Save Settings" button at the bottom of the configuration page.

Other visible fields include "Line Enable" (yes), "Proxy" (empty), "Make Call Without Reg" (no), "Ans Call Without Reg" (no), "Display Name" (login), "Auth ID" (login), and various service enablement options like "Call Waiting Serv", "Block ANC Serv", etc.


The bottom left corner of the browser window shows "Zakończono".



I-PHONE Polska
telefonია przyszłości

Krok 3

Pojawi się okno pokazane poniżej. Po kilku sekundach ustawienia zostaną zapisane i ukaże się panel konfiguracyjny bramki VoIP.

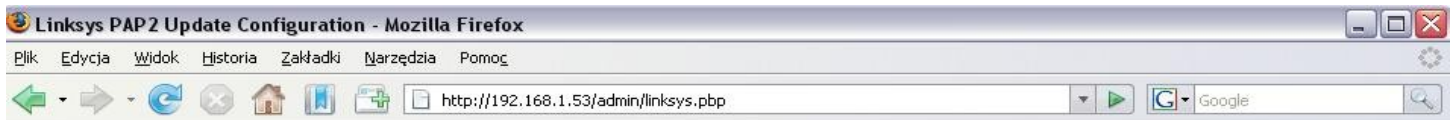

**PAP2 is updating your configuration. Unit may reset.
You will be redirected to the configuration page in 5 seconds.
If not, you can click [HERE](#) to return to the configuration page.**

Zakończono

Sprawdzamy czy na bramce zapaliła się dioda PHONE 1. Jeżeli tak to konto jest skonfigurowane poprawnie. W przeciwnym razie należy powtórzyć procedurę i upewnić się, że dane zostały wpisane poprawnie.



I-PHONE Polska
t e l e f o n i a p r z y s z ł o ś c i

W analogiczny sposób konfigurujemy drugą linię telefoniczną w zakładce LINE 2.

Zamykamy okno panelu konfiguracji bramki VoIP i możemy zacząć dzwonić z naszego konta w serwisie www.DarmowyTelefon.pl